



Wine cabinets installations **Pure and Revelation** Flush-fitting diagrams


Pure and Revelation dimensions

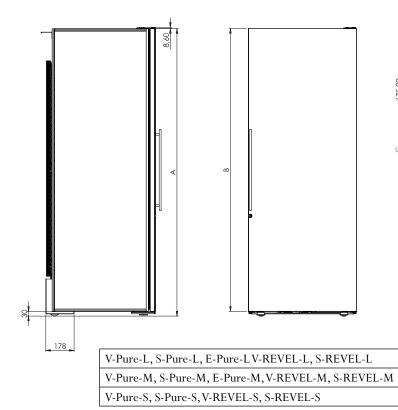

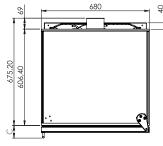

B (mm)	C (mm) with handle	
1780	Black Piano Door	80
1434	Full Glass Door	80
915	Glass Door	0

Flush-fitting dimensions to be applied

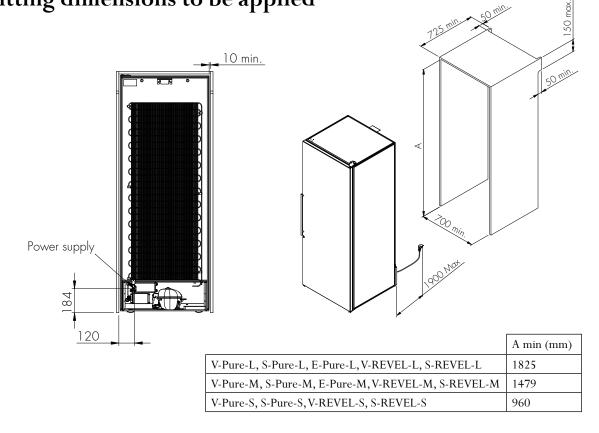

A (mm)


1810

1464

945



Wine cabinets installations Pure and Revelation Flush-fitting diagrams

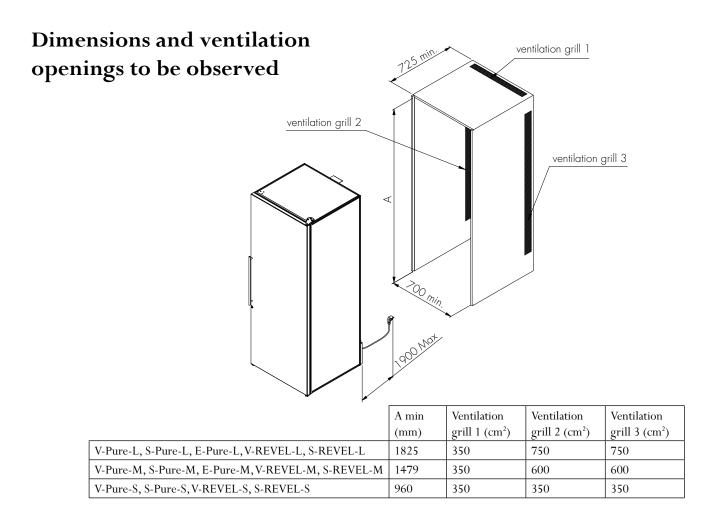

Installation

Place your cabinet in the desired location.


It must be open to the outside and well ventilated (not in an enclosed cupboard, for example), not be too damp (utility room, laundry room, bathroom...), have a flat, stable floor, be supplied with power (standard outlet, 16 A, earthed with 30mA* circuit breaker).


Take the lead (which you will find in your cabinet's "accessories" bag) and plug it into the socket, located at the back of the cabinet, on the bottom left-hand side (see diagram below). Wait 48hrs before switching on your cabinet.

Stop installation

Install the stop (which is located in the accessories bag) at the back of the cabinet (see diagram). This allows a space of 7 cm to be maintained between the wall and the rear of the cabinet. This space allows your

cabinet's power consumption to be optimised.



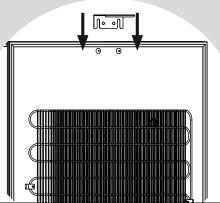

* not applicable to some countries.